

PRC-351 Tone level adjustment.
Many thanks to Martin G7JWR for the information.

AT YOUR OWN RISK.

Remove the battery, handset/headset & antenna and undo the four Allen screws on the rear panel.



Carefully pull away the rear panel to reveal the ribbon cable.




Gently pull the plug from the PCB fixed in the rear panel.



Remove the four screws on the front panel and gently pull away from the case.



Locate module 13 and with a small flat blade screw driver slowly turn the pot marked R9 anti clockwise until it stops.

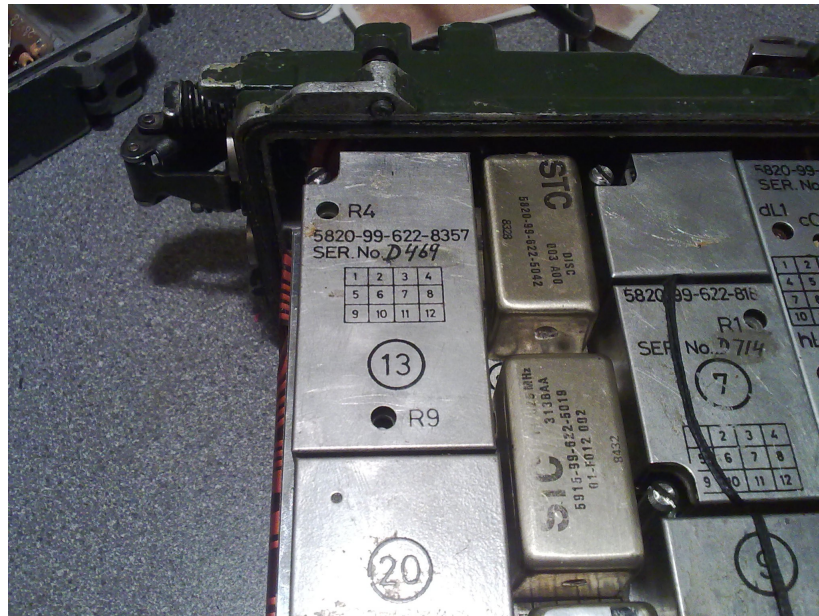

Re-assemble the radio, front panel first then the rear panel. Attach a battery, antenna & handset or headset and when you transmit the tone should no longer be heard.

73's Mike G1ZRN.
www.g1zrn.net